

*Harley Benton*

CG-15  
guitar combo

Musikhaus Thomann e.K.

Treppendorf 30

96138 Burgebrach

Germany

Telephone: +49 (0) 9546 9223-0

E-mail: [info@thomann.de](mailto:info@thomann.de)

Internet: [www.thomann.de](http://www.thomann.de)

29.12.2014, ID: 115431

# Table of contents

<b>1</b>	<b>General notes.....</b>	<b>4</b>
1.1	Further information.....	5
1.2	Notational conventions.....	6
1.3	Symbols and signal words.....	6
<b>2</b>	<b>General notes.....</b>	<b>8</b>
2.1	Further information.....	9
2.2	Notational conventions.....	10
2.3	Symbols and signal words.....	10
<b>3</b>	<b>Safety instructions.....</b>	<b>12</b>
<b>4</b>	<b>Features.....</b>	<b>16</b>
<b>5</b>	<b>Installation and starting up.....</b>	<b>17</b>
5.1	Pin assignment.....	18
<b>6</b>	<b>Components and functions.....</b>	<b>23</b>
<b>7</b>	<b>Technical specifications.....</b>	<b>27</b>
<b>8</b>	<b>Protecting the environment.....</b>	<b>28</b>

# 1 General notes

This manual contains important instructions for the safe operation of the unit. Read and follow the safety instructions and all other instructions. Keep the manual for future reference. Make sure that it is available to all those using the device. If you sell the unit please make sure that the buyer also receives this manual.

Our products are subject to a process of continuous development. Thus, they are subject to change.

## 1.1 Further information

On our website ([www.thomann.de](http://www.thomann.de)) you will find lots of further information and details on the following points:

Download	This manual is also available as PDF file for you to download.
Keyword search	Use the search function in the electronic version to find the topics of interest for you quickly.
Online guides	Our online guides provide detailed information on technical basics and terms.
Personal consultation	For personal consultation please contact our technical hotline.
Service	If you have any problems with the device the customer service will gladly assist you.

## 1.2 Notational conventions

This manual uses the following notational conventions:



### Letterings

The letterings for connectors and controls are marked by square brackets and italics.

**Examples:** *[VOLUME]* control, *[Mono]* button.

## 1.3 Symbols and signal words

In this section you will find an overview of the meaning of symbols and signal words that are used in this manual.

Signal word	Meaning
<b>DANGER!</b>	This combination of symbol and signal word indicates an immediate dangerous situation that will result in death or serious injury if it is not avoided.
<b>CAUTION!</b>	This combination of symbol and signal word indicates a possible dangerous situation that can result in minor injury if it is not avoided.
<b>NOTICE!</b>	This combination of symbol and signal word indicates a possible dangerous situation that can result in material and environmental damage if it is not avoided.
Warning signs	Type of danger
	Warning – high-voltage.
	Warning – danger zone.

## 2 General notes

This manual contains important instructions for the safe operation of the unit. Read and follow the safety instructions and all other instructions. Keep the manual for future reference. Make sure that it is available to all those using the device. If you sell the unit please make sure that the buyer also receives this manual.

Our products are subject to a process of continuous development. Thus, they are subject to change.



## 2.1 Further information

On our website ([www.thomann.de](http://www.thomann.de)) you will find lots of further information and details on the following points:

Download	This manual is also available as PDF file for you to download.
Keyword search	Use the search function in the electronic version to find the topics of interest for you quickly.
Online guides	Our online guides provide detailed information on technical basics and terms.
Personal consultation	For personal consultation please contact our technical hotline.
Service	If you have any problems with the device the customer service will gladly assist you.

## 2.2 Notational conventions

This manual uses the following notational conventions:

### Letterings

The letterings for connectors and controls are marked by square brackets and italics.

**Examples:** *[VOLUME]* control, *[Mono]* button.



### Displays

Texts and values displayed on the device are marked by quotation marks and italics.

**Examples:** *'24ch'*, *'OFF'*.

## 2.3 Symbols and signal words

In this section you will find an overview of the meaning of symbols and signal words that are used in this manual.

Signal word	Meaning
<b>DANGER!</b>	This combination of symbol and signal word indicates an immediate dangerous situation that will result in death or serious injury if it is not avoided.
<b>CAUTION!</b>	This combination of symbol and signal word indicates a possible dangerous situation that can result in minor injury if it is not avoided.
<b>NOTICE!</b>	This combination of symbol and signal word indicates a possible dangerous situation that can result in material and environmental damage if it is not avoided.
Warning signs	Type of danger
	Warning – high-voltage.
	Warning – danger zone.

### 3 Safety instructions

#### Intended use

This device is intended to be used for amplification and playback of signals from musical instruments with electromagnetic pickups. Any other use or use under other operating conditions is considered to be improper and may result in personal injury or property damage. No liability will be assumed for damages resulting from improper use.

This device may be used only by persons with sufficient physical, sensorial, and intellectual abilities and having corresponding knowledge and experience. Other persons may use this device only if they are supervised or instructed by a person who is responsible for their safety.

#### Safety



##### **DANGER!**

##### **Danger for children**

Ensure that plastic bags, packaging, etc. are disposed of properly and are not within reach of babies and young children. Choking hazard!

Ensure that children do not detach any small parts (e.g. knobs or the like) from the unit. They could swallow the pieces and choke!

Never let children unattended use electrical devices.



**DANGER!**

**Electric shock caused by high voltages inside**

Within the device there are areas where high voltages may be present. Never remove any covers.

There are no user-serviceable parts inside.



**DANGER!**

**Electric shock caused by short-circuit**

Do not modify the mains cable or the plug. Failure to do so could result in electric shock/death or fire. If in doubt, seek advice from a registered electrician.



### **CAUTION!**

#### **Possible hearing damage**

With loudspeakers or headphones connected, the device can produce volume levels that may cause temporary or permanent hearing impairment.

Do not operate the device permanently at a high volume level. Decrease the volume level immediately if you experience ringing in your ears or hearing impairment.



### **NOTICE!**

#### **Risk of fire**

Do not cover the device nor any ventilation slots. Do not place the device near any direct heat source. Keep the device away from naked flames.



**NOTICE!**

**Operating conditions**

This device has been designed for indoor use only. To prevent damage, never expose the device to any liquid or moisture. Avoid direct sunlight, heavy dirt, and strong vibrations.



**NOTICE!**

**Power supply**

Before connecting the device, ensure that the input voltage (AC outlet) matches the voltage rating of the device and that the AC outlet is protected by a residual current circuit breaker. Failure to do so could result in damage to the device and possibly injure the user.

Unplug the device before electrical storms occur and when it is unused for long periods of time to reduce the risk of electric shock or fire.

## 4 Features

Special features of the device:

- 15 watt output power (RMS)
- 6.5" speaker
- 2-band tone stack
- Gain control provides clean, crunch and distortion sounds
- Headphones outlet
- Energy-saving mode



## 5 Installation and starting up

Unpack and carefully check that there is no transportation damage before using the unit. Keep the equipment packaging. To fully protect the device against vibration, dust and moisture during transportation or storage use the original packaging or your own packaging material suitable for transport or storage, respectively.

Establish all connections as long as the unit is switched off. Use the shortest possible high-quality cables for all connections.



### **NOTICE!**

#### **Possible property damage by magnetic fields**

Loudspeakers produce a static magnetic field. Therefore, maintain an appropriate distance to devices that can be adversely affected or damaged by an external magnetic field.


### 5.1 Pin assignment

#### 1/4" phone socket for signal input



Drawing and table indicate the pin assignment of a 1/4" TS phone plug to be used to connect the INPUT socket.

 1	Signal
2	Ground, shielding

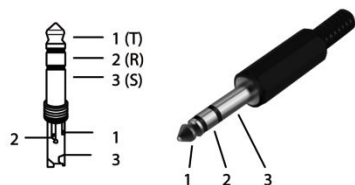

Drawing and table indicate the pin assignment of a 1/4" TRS phone plug to be used to connect the HEADPHONE socket.


1	Signal left channel
2	Signal right channel
3	Ground, shielding




*We recommend headphones with a stereo plug in order to drive right and left headphone speakers. However, the signal on this outlet is mono*


### Mounting the carrying handle

 Loosen the nuts on the ends of the supplied bracket until a gap is visible.

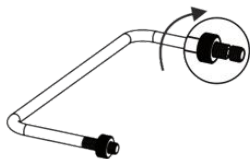


  Insert the ends of the brackets into the designated holes (4) at the top of the device.

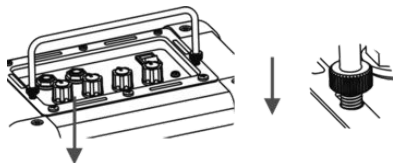

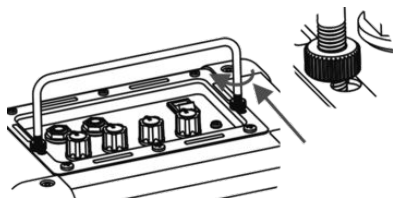


 Fix the bracket in the two holes by sliding the bar straight into arrow direction.

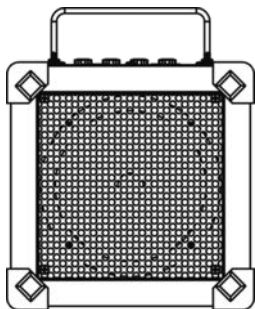

Tighten the nuts on the ends of the brackets back on.


### Using the bracket for tilt-back setup

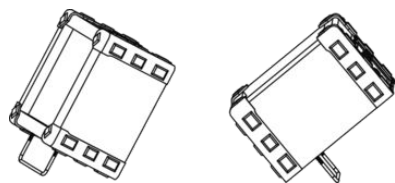 

The included bracket can also be mounted into the prepared openings at the bottom or back of the device to use it as a monitor on stage.

## 6 Components and functions
 
### Top panel

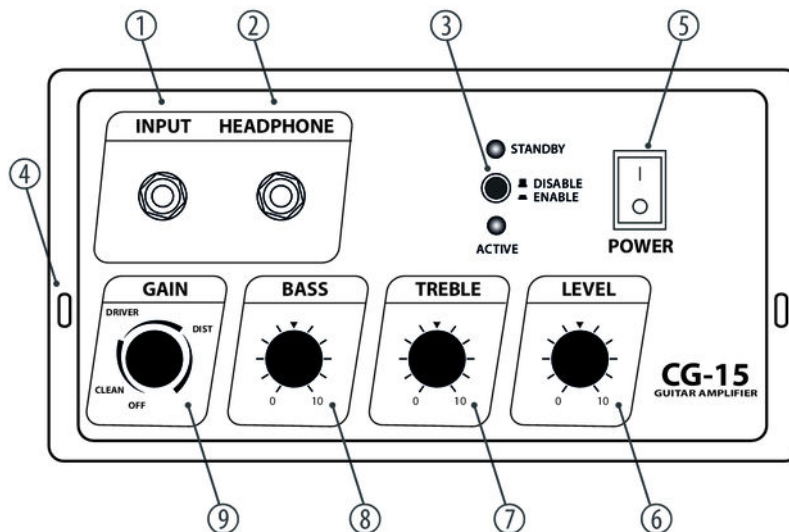

CG-15

- |   |   |
|---|---|
| 1 | <i>[INPUT]</i><br>1/4" TS phone socket for the input signal from your instrument.   |
| 2 | <i>[HEADPHONE]</i><br>1/4" phone socket for headphones. If you connect headphones, the internal speaker is disconnected.<br>To avoid annoying noise, turn the volume control 'LEVEL' (5) down before plugging headphones in or out. |



3	<p><i>[STANDBY]</i></p> <p>Push button to enable or disable the energy saving mode.</p> <p>If the power is on and there is no signal input at the <i>[INPUT]</i> jack for 15 minutes, the device will automatically enter standby mode. As soon as the <i>[INPUT]</i> jack receives a instrument signal, the device switches back to normal mode.</p> <p>LED <i>[ACTIVE]</i></p> <p>Power indicator LED. This LED is permanently on in normal mode. It goes off when the energy-saving mode is enabled and the box enters the standby mode.</p> <p>LED <i>[STANDBY]</i></p> <p>Standby mode. This LED lights up when the energy saving mode is enabled and the box enters the standby mode. It goes off again when the box switches back to normal.</p>
4	<p>Mounting holes for the supplied bracket to be used as carrying handle on the top side.</p>
5	<p><i>[POWER]</i></p> <p>Use the mains switch to turn the unit on or off.</p>
6	<p><i>[LEVEL]</i></p> <p>This is the volume control.</p>

7	<i>[TREBLE]</i> Treble control of the 2-band tone stack.
8	<i>[BASS]</i> Bass control of the 2-band tone stack.
9	<i>[GAIN]</i> Use this control to adjust the input gain. The dial shows 3 areas for the corresponding sounds: 'Clean' - delivers clean sounds, 'Driver' - for bluesy crunch sounds and 'Dist'(ortion) for fat overdrive sound.

## 7 Technical specifications

Output power	15 W (RMS)
Speakers	1 × 6.5" speaker, 4 Ω
Operating voltage	AC 220 – 240 V ~ , 50/60 Hz
Dimensions (W × D × H)	235 mm × 155 mm × 235 mm
Weight	3.9 kg

## 8 Protecting the environment

### Disposal of the packaging material



For the transport and protective packaging, environmentally friendly materials have been chosen that can be supplied to normal recycling.

Ensure that plastic bags, packaging, etc. are properly disposed of.

Do not just dispose of these materials with your normal household waste, but make sure that they are collected for recycling. Please follow the notes and markings on the packaging.

### Disposal of your old device



This product is subject to the European Waste Electrical and Electronic Equipment Directive (WEEE). Do not dispose with your normal household waste.

Dispose of this device through an approved waste disposal firm or through your local waste facility. When discarding the device, comply with the rules and regulations that apply in your country. If in doubt, consult your local waste disposal facility.







